
FIRE COUNTER SHUTTER FACE MOUNTED DOORS

WARNING

PÉRSONAL INJURY CAN RESULT FROM INEXPERIENCED PEOPLE WORKING ON THIS DOOR. ONLY EXPERIENCED, QUALIFIED ROLLING DOOR SERVICE PERSONNEL SHOULD INSTALL, DO REPAIR WORK OR MAKE ADJUSTMENTS TO THE DOOR.

NOTE: FOR BETWEEN JAMB MOUNTED DOORS, SEE STEP 1A ON SEPARATE SHEET.

INSTALL WALL BRACKETS TO JAMBS. SEE FIGURE 1, 2, & 3. BEFORE INSTALLING SECOND ANCHOR FROM TOP. STEP 1

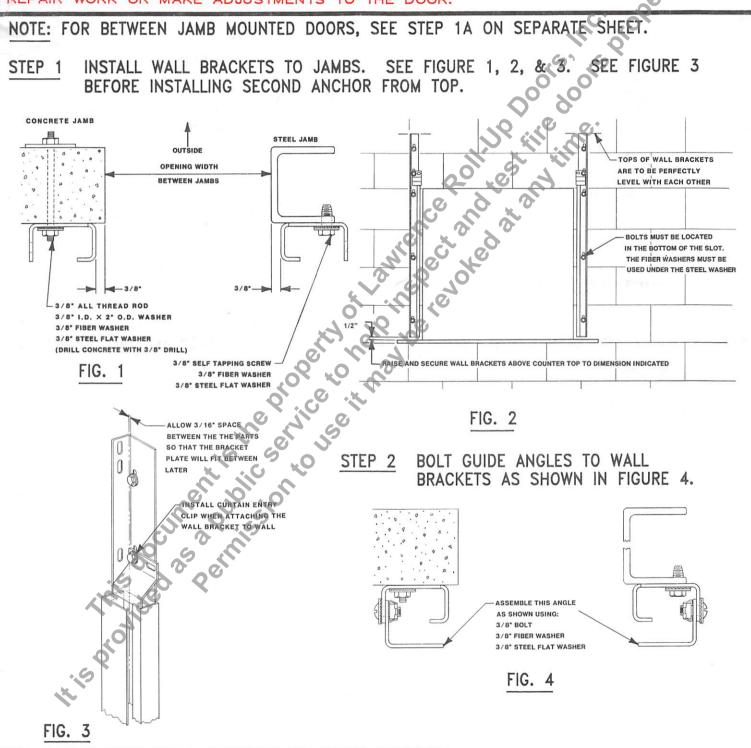




5800 Scott Hamilton Drive Little Rock, Ar. 72209 1370 Furneaux Road Marysville, Ca. 95901

STEP 3 PLACE BRACKETS ON BARREL AS SHOWN IN FIGURE 5.

NOTE: THE SHAFT IN THE TENSION END OF THE BARREL WILL ROTATE WITHOUT THE BARREL TURNING.

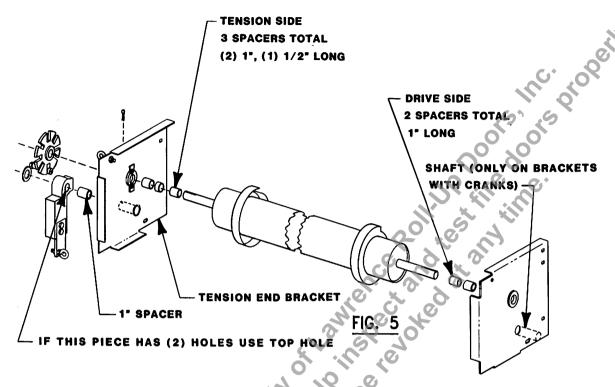

RAISE THE BARREL AND BRACKETS INTO POSITION AND ATTACH TO WALL BRACKETS STEP 4 OR CHANNELS AS SHOWN IN FIGURE



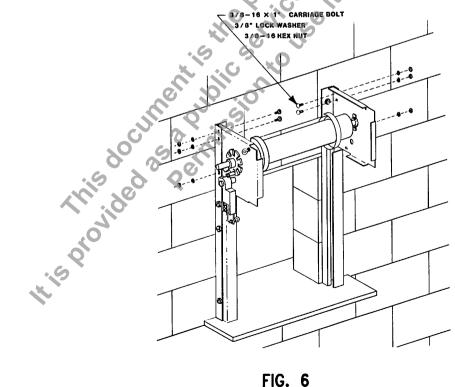


FIG. 6

RAISE THE CURTAIN INTO POSITION AND ATTACH TOP SLAT TO BARREL HOOPS AS STEP 5 SHOWN IN FIGURES 7 AND 8. BEFORE DRILLING THROUGH SLATS AND HOOPS BE SURE THAT THE CURTAIN IS CENTERED BETWEEN THE BRACKET PLATES.

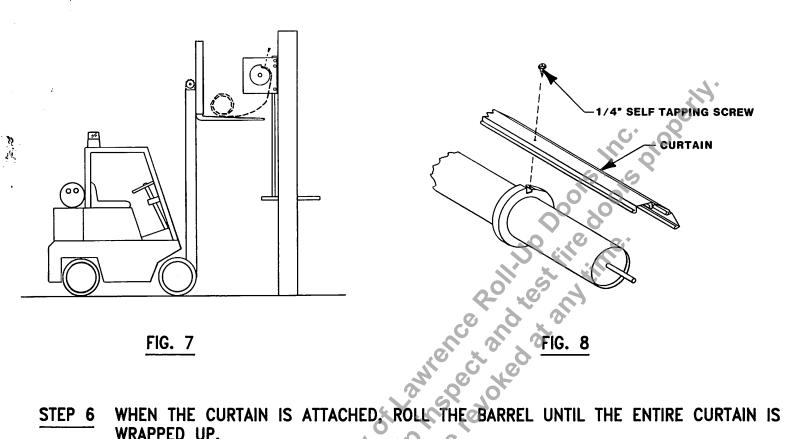

- STEP 6 WRAPPED UP.
- ATTACH A PAIR OF VISE GRIPS ON BOTH GUIDES AND LOWER THE CURTAIN INTO STEP 7 GUIDES UNTIL BOTTOM BAR RESTS ON VISE GRIPS ON BOTH SIDES OF THE DOOR. SEE FIGURE 9.
- BOLT THE INSIDE CURTAIN STOPS TO THE BRACKETS USING 1/4" X 5/8" HEX HEAD STEP 8 SEE FIGURE 9.

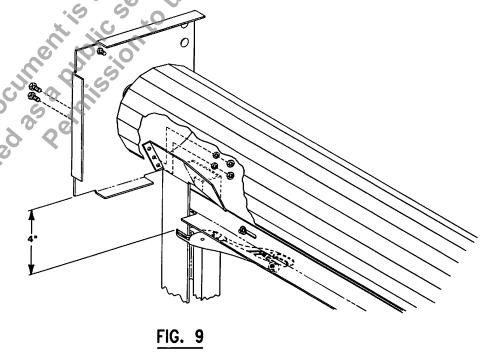

POSITION TENSION WHEEL FROM BRACKET SO THAT THE HEAD OF THE 7/16 INCH DIAMETER CAP SCREW IS TOUCHING THE BRACKET. BE SURE THAT THE 1/4" SQUARE KEY IS IN PLACE AND TIGHTEN THE SET SCREWS IN THE TENSION WHEEL. WIND THE SPRINGS IN A DOWNWARD DIRECTION AS SHOWN IN FIGURE 10.

WIND SPRINGS TURNS.

CAUTION

"USE OF OTHER TOOLS OR BARS THAN SHOWN FOR WINDING SPRINGS COULD BE DANGEROUS".

AFTER SPRINGS ARE WOUND ALLOW (1) OF THE WINDING BARS TO REST AGAINST THE OPENING JAMB.

BE SURE THAT THE BAR IS POSITIONED IN THE CENTER OF THE SLOT OF THE TENSION WHEEL AND RESTING AGAINST A FIRM SURFACE OF THE BUILDING.

REMOVE THE VISE GRIPS FROM THE GUIDES AND LOWER CURTAIN TO CLOSED POSITION. CHECK FOR PROPER BALANCE OF THE DOOR AT THIS TIME.


IF THE DOOR WILL NOT SET ON THE COUNTER, MAISE TO OPEN POSITION AND DECREASE SPRING TURNS BY ONE NOTCH.


CAUTION


NEVER ADJUST SPRING TENSION UNLESS THE DOOR IS IN OPEN POSITION. ATTACH A PAIR OF VISE GRIPS ON BOTH GUIDES. SEE FIGURE 9.


IF THE DOOR IS HARD TO RAISE OPEN IT AND ADD (1) NOTCH TENSION. REPEAT ADJUSTING PROCEDURES ABOVE UNDL DOOR OPERATES SMOOTH AND EASILY.

STEP 10 INSTALL DOOR HOOD AS SHOWN. IF DESIRED YOU CAN COMPLETE STEP 11 BEFORE DOING THIS STEP. SEE CIGURE 11 FOR FACE MOUNT DOOR.

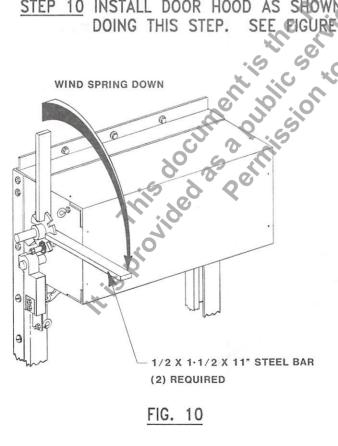

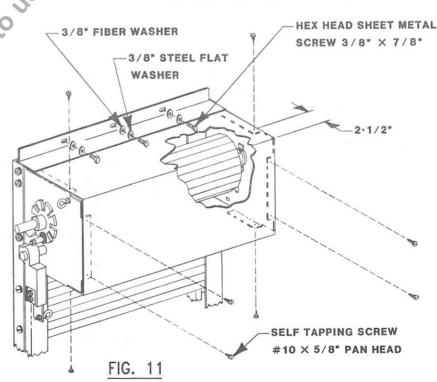

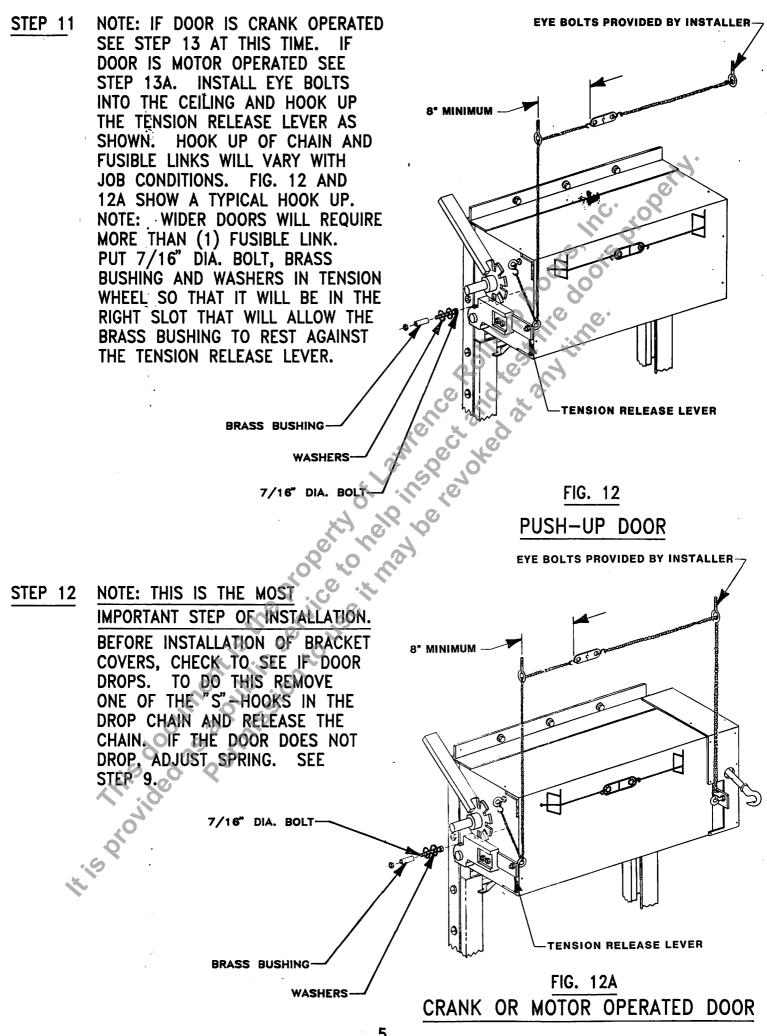

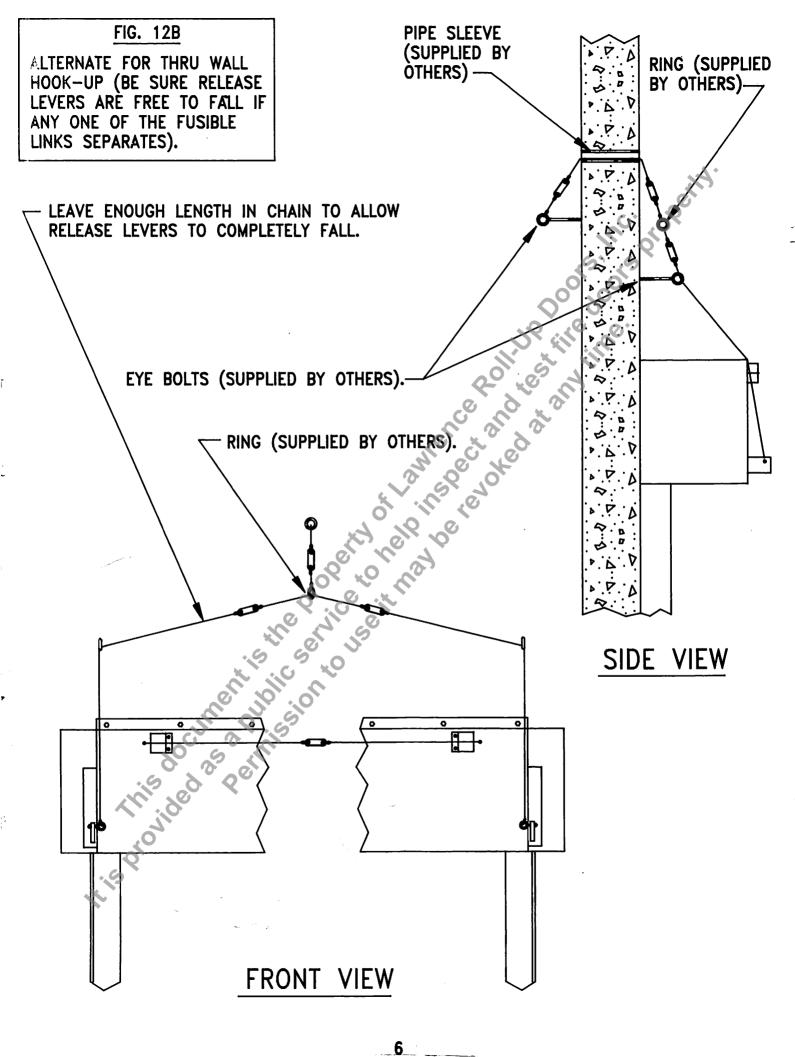

STEP 13

